


PATIOVA

LIVE INSIDE OUT



POLY TETE-A-TETE ATTACHMENT ASSEMBLY MANUAL

Parts List

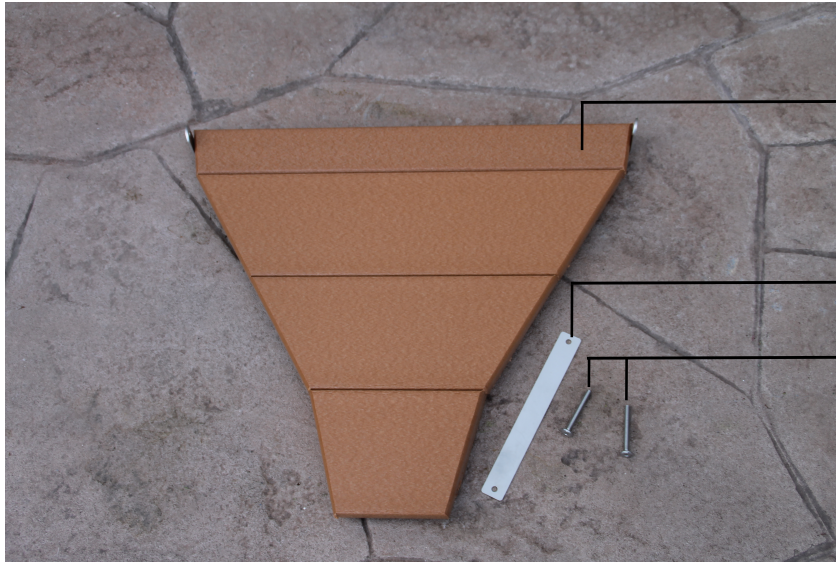

Tete-a-tete

Stainless Steel Flat Bar


2 Bolts

Tools Required For The Job (Included)



5/32" Hex Key

*NOTE: This Hex Key is used to tighten all the screws used in the assembly process.

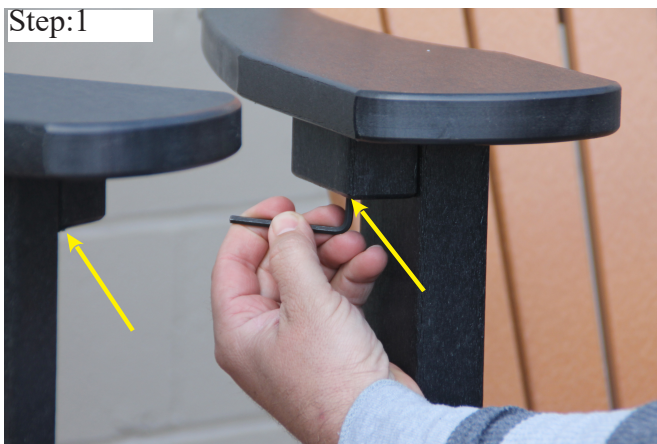


Remove the bolt connecting the block and the arm rest with 5/32 hex key. Remove the bolt on both chairs. **Be sure chairs are placed on a flat surface and slightly angled towards each other.



Install stainless steel flat bar using the bolts removed in step 1. This will create a wedge for the front part of the tete-a-tete to fit into.

Step:3

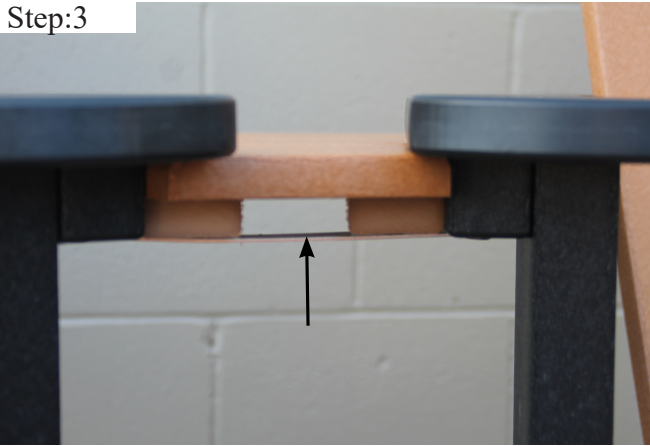

Position narrow part of tete-a-tete between bottom of armrests and top of flat bar. Flat bar should be where the arrow is pointing.

Step:4



Remove bolt that fastens the armrest to the chair back. This bolt will not be used again. Push tete-a-tete forward into wedge until bracket on the tete-a-tete and the hole in the armrest are properly aligned.

Step:5



Install bolt provided in kit assembly bag. Connect the bracket through the armrest and into the chair back. Repeat on the other chair.

Step:6



Your assembly is now complete! Be sure four bolts are properly tightened. Do not lift and move chairs with the tete-a-tete mounted between them.



6649 North Moscow Road
Parkesburg, PA 19365
610-857-1359
patiova.com
info@patiova.com