


POLY ADIRONDACK
BAR HEIGHT
DINING CHAIR



ASSEMBLY MANUAL

Parts List

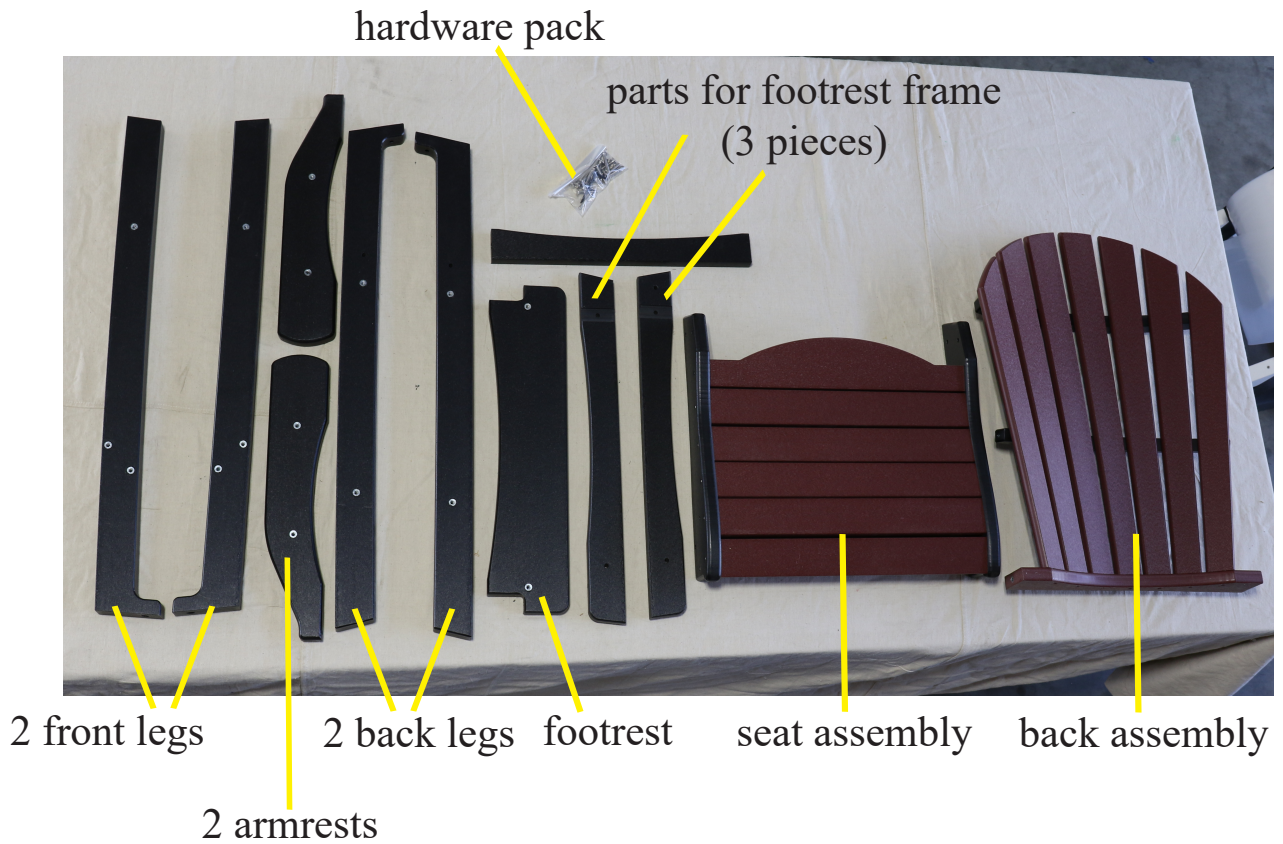

Tools Required For The Job



5/32" Hex Key
(included)

*NOTE: This Hex Key is used to tighten all the screws used in the assembly process.

Step:1



Identify components. The two front legs are identified by two insert nuts.

Step:2



Begin by placing the seat assembly on its side and fastening one front leg using two 1 1/2" bolts. Bolts are fastened from the inside, through a pre-drilled hole. Use two bolts on each front leg. Do not tighten yet.

Step:3



Then fasten two back legs using one 1 1/2" bolt on each leg. Again fastening from the inside though the pre-drilled hole. One pre-drilled hole will be empty at this time. Only finger tighten bolts.

Step:4



Fasten armrests using 1 1/2" bolt. Two bolts in each arm. Tighten now. Then tighten the bolts in the legs as well.

Step:5




You are now ready to install the back assembly. Begin by threading a 3" bolt into the back leg, then positioning the back to receive the bolt. This bolt goes through the back leg, then through the seat support, then into the insert nut in the bottom of the back assembly. Repeat on opposite side. Only finger tighten at this point.

Step:6




Fasten armrest to the back using a 2 1/4" bolt. Tighten immediately, then tighten bolts in the bottom of the back as well.

Step:7

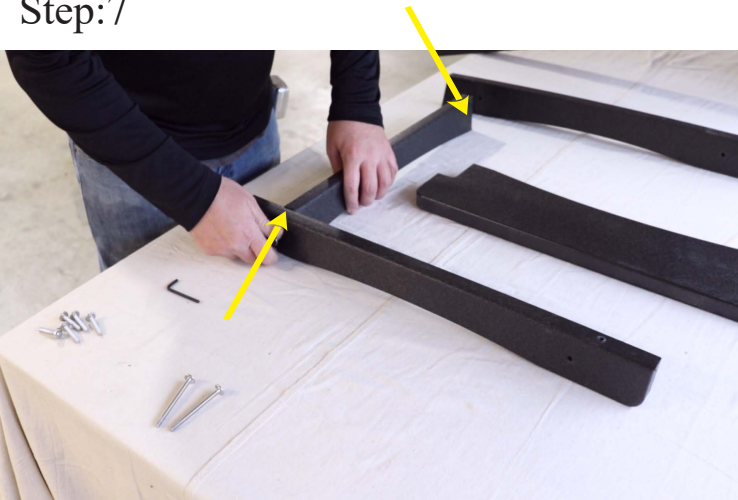

Layout footrest frame components in this configuration. Fasten at the two points identified using 1 1/2" bolt. Tighten now.

Step:8

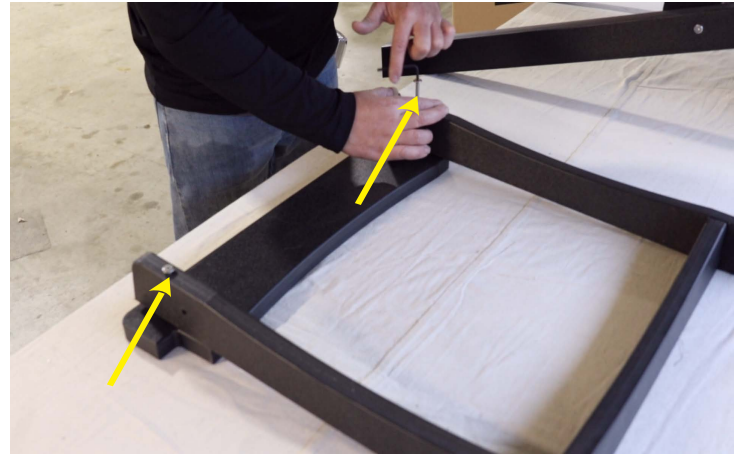


Then fasten footrest to frame at the two points identified using 3" bolts.

Step: 9



Set footrest frame between the legs of the chair.

Step:10

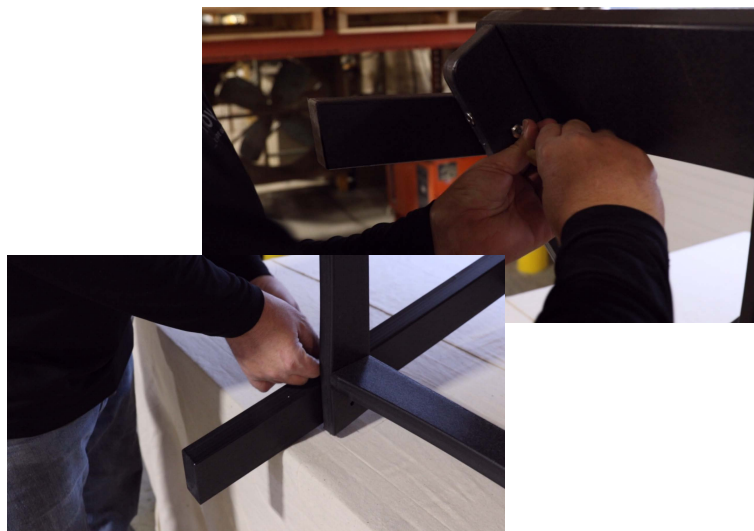

Then fasten to legs using four 1 1/2" bolts through the pre-drilled holes. All the bolts fastening the chair legs can be tightened at this time.

Step:11



Congratulations! Your assembly is now complete. Your chair should appear like this when finished!