

POLY ADIRONDACK DINING CHAIR



ASSEMBLY MANUAL

Parts List



Tools Required For The Job



5/32" Hex Key
(included)

*NOTE: This Hex Key is used to tighten all the screws used in the assembly process.

Step:1



Begin by placing the seat on a clean, smooth surface. Fasten front legs to seat using 1 1/2" bolts (front legs are legs with two inset nuts).

Step:2



Fasten back leg to seat using 1 1/2" bolts.

Step:3




Note: the back leg only receives one bolt into the inset nut at this point. The through hole will be used to fasten the bottom of the back. Tighten this bolt when installing the back.

Step:4



Repeat steps 1 and 3 on opposite side then your chair should look like this. Do not tighten bolts yet.

Step:5

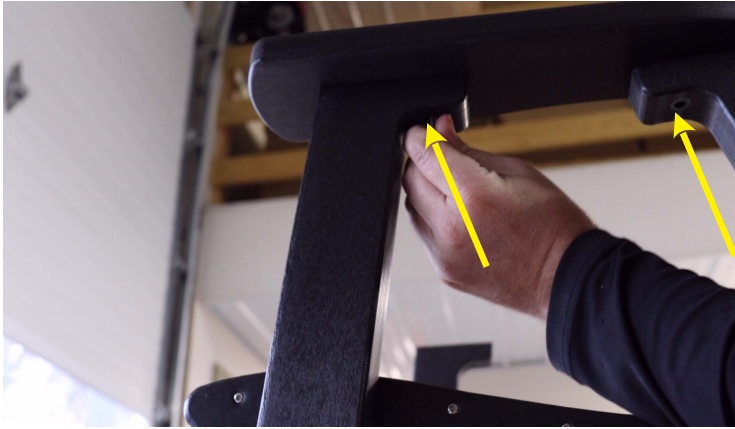

Fasten armrest to front and back leg using 1 1/2" bolt. Arrows identify two pre-drilled holes.

Step:6



Tighten bolts. Then repeat steps 5 and 6 on opposite side. Tighten all bolts on front leg.

Step:7



Prepare to install back by threading a 3" bolt into the empty hole on both back legs. The bolt should only come through a 1/8" to 1/4".

Step:8



Align pre-drilled holes with inset nuts on bottom of back. Tighten. Repeat on opposite side.

Step:9



Fasten armrest to center of back using a 2 1/4" bolt. Tighten. Repeat on opposite side.

Step:10



Congratulations! Your assembly is now complete. Your chair should appear like this when finished!