


WOOD ADIRONDACK CHAIR



ASSEMBLY MANUAL

Parts List

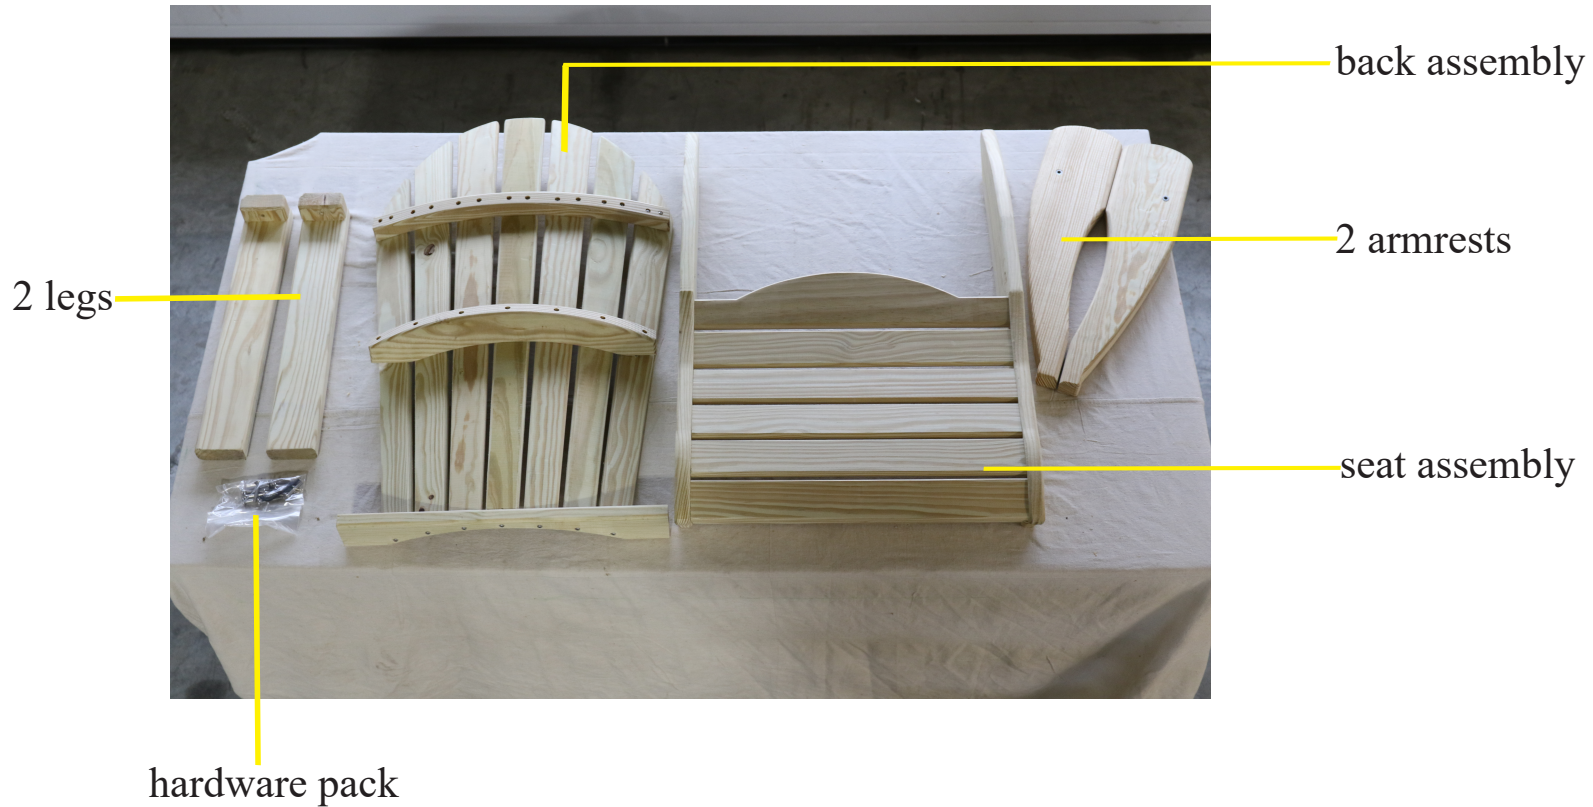

Tools Required For The Job



5/32" Hex Key
(included)


*NOTE: This Hex Key is used to tighten all the screws used in the assembly process.

Step:1



Begin by placing the seat assembly on its side. Place one leg onto the seat assembly. Fasten with two 1 1/2" bolts through the pre-drilled holes.

Step:2

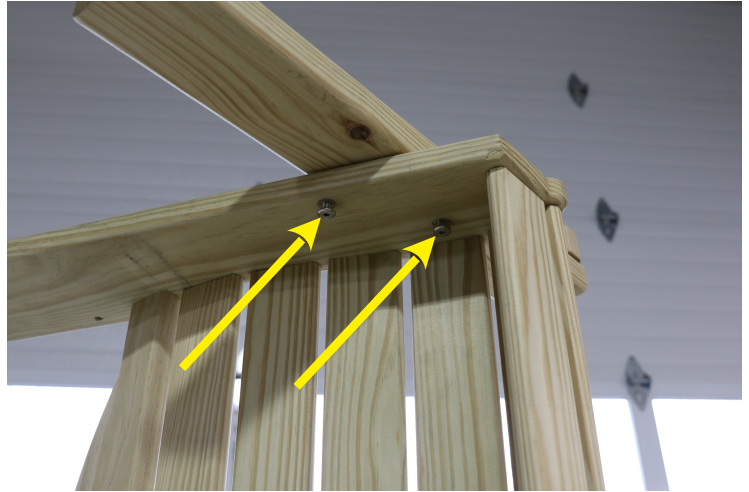

Fasten with two 1 1/2" bolts through the pre-drilled holes.
Repeat steps 1 and 2 on opposite side.

Step:3



Place the seat assembly in this position. Place the armrest on the leg and fasten using a 2" bolt through the pre-drilled hole. Repeat this step on opposite side. Tighten now.

Step:4



Place the chair in this position.

Step:5



Prepare to install the back assembly by starting a 1 1/2" bolt in the pre-drilled hole, then aligning with inset nut on lower part of back assembly.

Step:6



Fasten back assembly on both sides but do not tighten now.

Step:7



Fasten armrests to back assembly with lags.
Then tighten all the bolts.

Step:8



Congratulations! Your chair assembly is now complete. Your chair should appear like this when finished.