


WOOD ADIRONDACK LOVE SEAT



ASSEMBLY MANUAL

Parts List

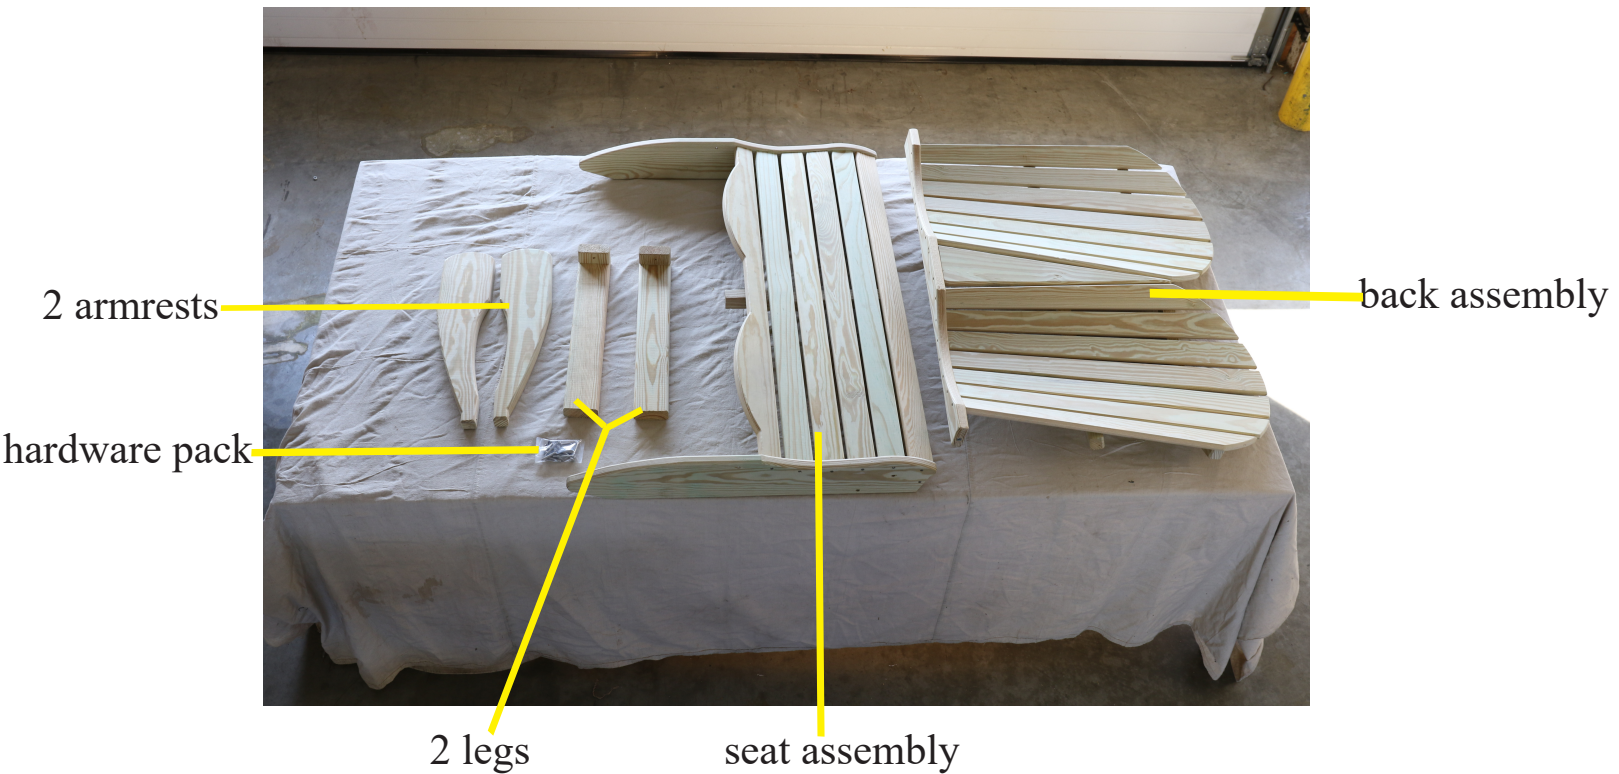

Tools Required For The Job



5/32" Hex Key
(included)

*NOTE: This Hex Key is used to tighten all the screws used in the assembly process.

Step:1



Place seat assembly in this position on a smooth, clean surface. Then fasten one leg to seat assembly using 1 1/2" bolts through pre-drilled holes. Only finger tighten now. Repeat this step on opposite side.

Step:2



Place assembly in this position.

Step:3



Fasten armrest to leg using 2" bolt through pre-drilled hole. Tighten now. Repeat on opposite side.

Step:4



Place assembly in this position.

Step:5



You are now ready to install the back assembly.

Step:6



Fasten at this point using 1 1/2" bolt. Tighten, then fasten at opposite end as well.

Step:7



Fasten armrest to center of back assembly using 2 1/2" lag. Align with pre-drilled hole. Then repeat on opposite side. Tighten now.

Step:8



Tighten legs now that were finger tightened on step 1.

Step:9



Fasten support on back assembly to support on seat assembly using 2 1/2" screws.

Step:10



Congratulations! Your assembly is now complete. Your love seat should appear like this when complete.