


WOOD ADIRONDACK ROCKING CHAIR



ASSEMBLY MANUAL

Parts List

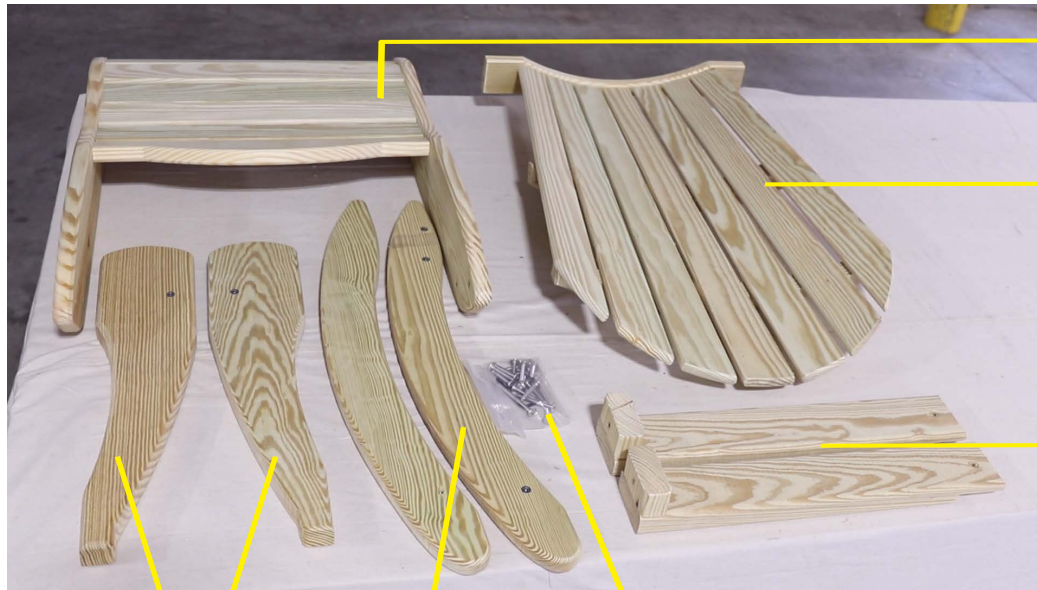

seat assembly

back assembly

2 legs

2 armrests

2 rocker
runners

hardware pack

Tools Required For The Job



5/32" Hex Key
(included)


*NOTE: This Hex Key is used to tighten all the screws used in the assembly process.

Step:1




Begin by placing the seat assembly on its side. Place one leg on the seat assembly. Fasten with two 1 1/2" bolts through the pre-drilled holes.

Step:2

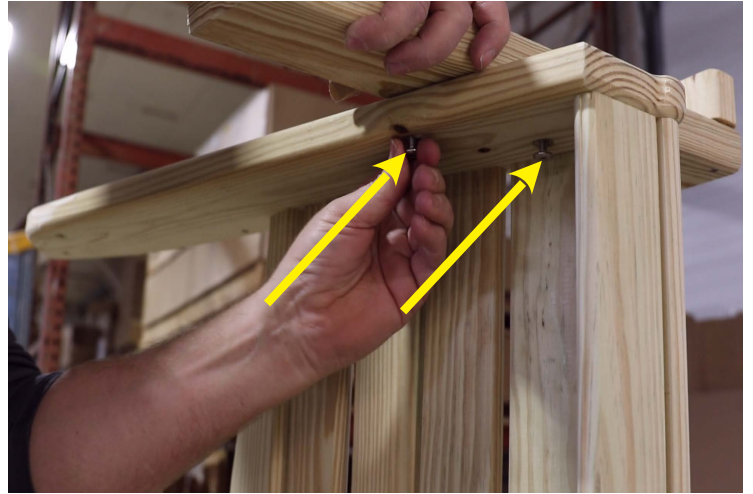

Fasten with two 1 1/2" bolts through the pre-drilled holes. Repeat steps 1 and 2 on opposite side.

Step:3

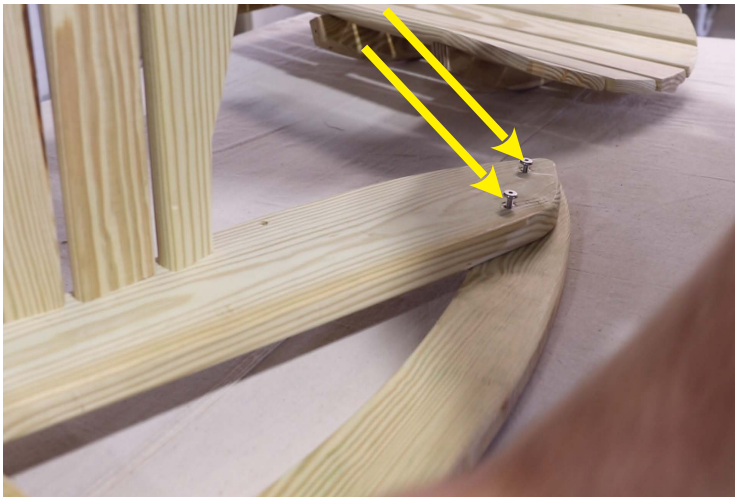

Fasten rocker runner to seat assembly using 1 1/2" bolts through pre-drilled holes. Repeat this step on opposite side.

Step:4




Place the chair in this position.

Step:5



Fasten armrest to leg using 2" bolt.
Repeat on opposite side.
Tighten now.

Step:6

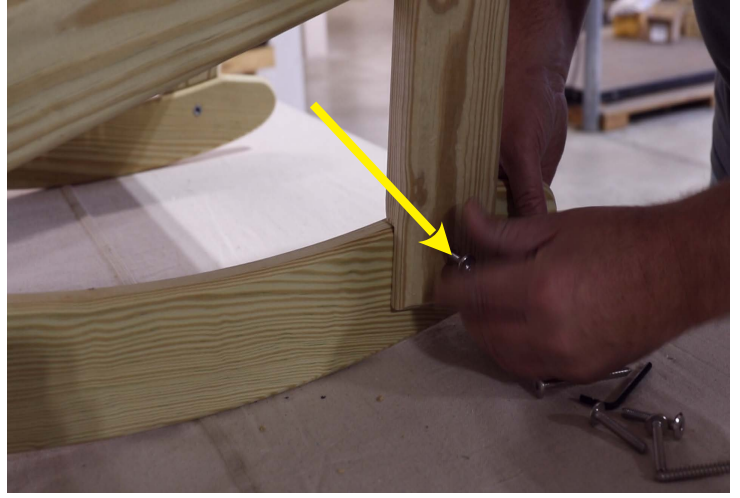

Fasten leg to rocker runner using 1 1/2" bolt.
Repeat on opposite side.

Step:7



You are now ready to install the back assembly. Fasten bottom of back to seat using 1 1/2" bolt. Repeat on opposite side. Tighten now.

Step:8



Fasten armrest to center of back using 3" lags through pre-drilled holes.
Repeat on opposite side.
Then tighten all the bolts.



Congratulations! Your chair assembly is now complete. Your chair should appear like this when finished.